

Collamat® CP21

The CP21 Adapter to the Collamat labellers gives a simple labelling solution for cylindrical products of various sizes.


The products is inserted and removed manually.

Triggering of the labelling process is done by activating a foot pedal or a optical scanner.

The solution is usually used with a table stand as desktop solution.

The adapter can be used with Collamat® C3600/6600/7600/8600 labelers.



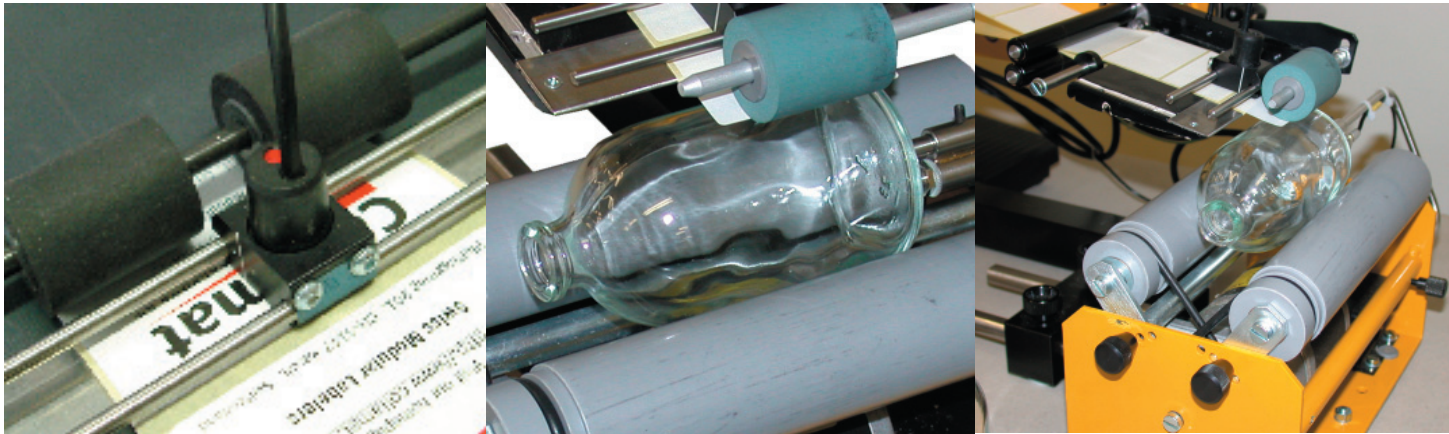

FEATURES

- Speed synchronisation – Automatic adjustment to the labeller
- Magnet adapter – No pressurized air needed,
- User-friendly – Easy adjustment to various cylindric sizes
- Adapter – Automatic removal of dispensing edge after labelling for easy access
- Precise labelling – Labels always in the same position
- Stop system – labelling results reproducible
- Security – No danger for the operator

TECHNICAL DATA

	CP 21	CP 21
Passing width of label web:	95 mm (3,7 in)	160 mm (6,3 in)
Dispensing speed:	14 m/min (46 ft/min)	14m/min (46 ft/min)
Labelling accuracy:	± 1 mm(1/30 in)	± 1 mm(1/30 in)
Product diameter:	Min. 10 mm (1/25 in) Max outer diameter 120 mm (4.7 in)	
Triggering the labelling:	Foot pedal or optical scanner	
Power supply	Over the collamat	
Required equipment :	Collamat dispenser with magnet adapter, table stand	
Approbation:	CE/Gost/Nema	

All data are indicative and may be subject to alteration

Martek Industries Ltd
 12B Ridings Park Industrial Estate
 Eastern Way
 Cannock
 Staffs WS11 7FJ
 Tel: 01543 502202
 Fax: 01543 467726
 Email: sales@martekonline.co.uk
 www: www.martekonline.co.uk